
Modular Diagnostic Station

SunTech


POLE STAND ASSEMBLY INSTRUCTIONS



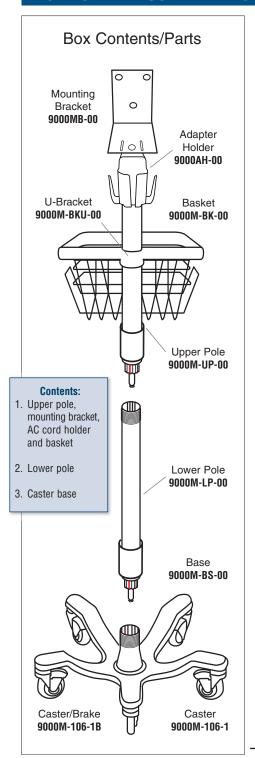

*No Tools Required

 Align keyway (red) of Lower Pole with keyway (red) of Caster Base, and insert down ward until fully seated. Once fully seated, twist lock sleeve clockwise until hand tight.

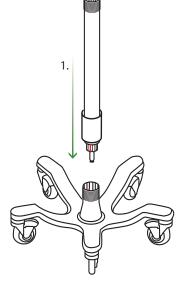


3.





2. Align keyway (red) of Upper Pole and basket with keyway of Lower Pole (red), and insert downward until fully seated. Once fully seated, twist lock sleeve clockwise until hand tight.

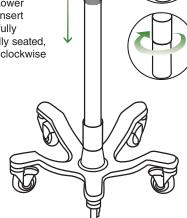

 Align holes on rear of BP module with the 3 holes on the mounting plate as shown. Hand-tighten 3 mounting screws through rear of mounting plate into BP module.





55 Commerce Drive Hauppauge, NY 11788



Suntech Medical Ltd. Oakfield Industrial Estate Eynsham, Oxfordshire OX29 4TS UK Inspected in the U.S.A. Made in Taiwan tel: 631-273-9600 toll free: 1-800-232-2670 fax: 631-273-9659

www.adctoday.com/adview info@adctoday.com

To Register Your Product, visit us at www.adctoday.com and follow the links

For questions, comments, or suggestions, call in the U.S.A. Toll Free: 1-800-ADC-2670